


# Smart Lock Catalog description

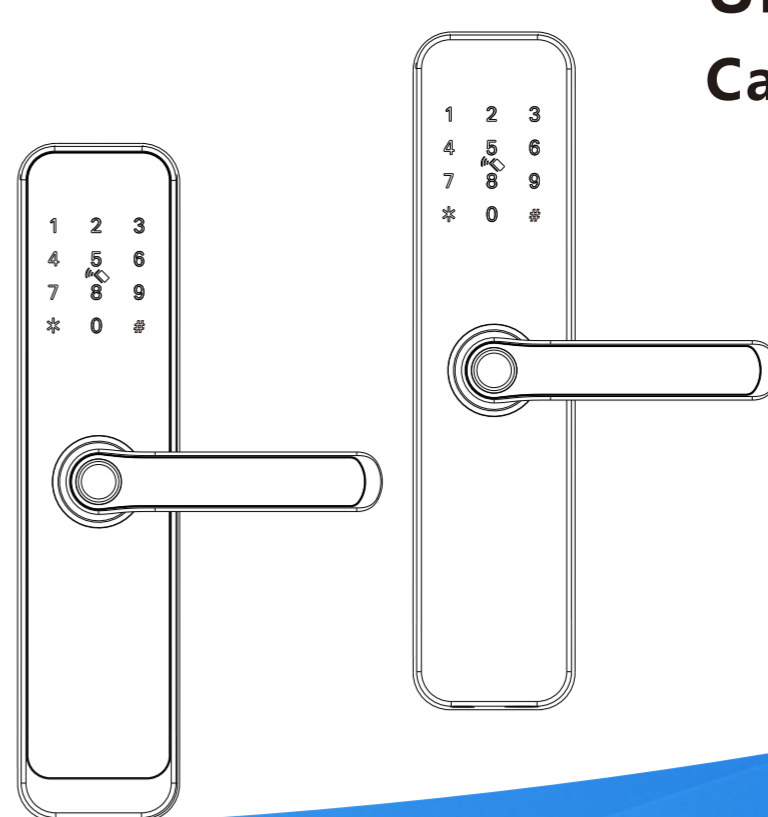

01

Dear user,  
Thank you for purchasing the smart door lock

To improve the quality survival with innovative technology, to create the world's most outstanding, most innovative products so that enterprises become the industry benchmark. We always adhere to the "quality survival, service and development" business philosophy. In the intelligent lock industry, all constantly improve the product quality system, our company keep up with the pace of the times. We always walk in the forefront of the industry, and always steadfastly protects the people's property safety! From products to service, we always pursue to provide you with a full range of intimate and comfortable service! Thank you for your support for smart door lock!!

### Disclaimer:

We have done our best to ensure that the information provided in this manual is correct and reliable, but we cannot fully guarantee errors before and during printing. Sometimes we in order to improve the performance, reliability and safety of components and systems, may upgrade the product, which may be somewhat inconsistent with the contents of the manual, but does not affect the actual operation, if there is a change is not known, please understand! Our company will update the content regularly. If you have any questions, please call our company to answer. The final interpretation of the entire contents of this manual is the right of the Company. The functions described in this statement are not used as a reason for the use of this product for special purposes and the Company shall not be liable for accidents and hazards caused by the customer's improper operation.

### Catalog description

Safety and precautions	2
Dual latch install diagram	3
Appearance and dimensions	4-5
Installation diagram	6-8
Functions and Operations	9-12
Other instructions	13-14
System Parameters	15

02

### Safety and precautions

- Smart door lock as a high-tech products, the installation of good or bad directly affect the normal operation and service life of the door lock, it is recommended that you install the door lock after the room has been decorated, please choose to ensure the quality of personnel to install, the factory strictly according to the company's installation standards for operation.
- Do not use in environments with strong radiation, high magnetic field, and high temperature with corrosive substances, so as not to affect the performance and life of the smart lock.
- Please initialize the door lock as soon as the door lock installation is completed and restore the lock to the initial state. And please set your electronic key Settings immediately after initialization to prevent others from illegally opening your door lock.
- Please using or change the same brand 4pcs AAA 1.5V alkaline battery, mix using of New Old battery OR using Non-destructive battery will destroy your door lock.
- In order to better feel the convenience and advanced of the company's products, please carefully read this manual before use, if there are any doubts, can directly to the company's customer service center or headquarters service center, the company has professional technical personnel for your eyes, to ensure your use of rest assured.
- Battery not include on shipment.**

### Dual latch install diagram

#### Remind

#### Product performance

Ideal for home, office indoor door lock  
Suitable to 38-50mm thickness door

#### Determine the door direction


##### Stand outside of the door

Adjust the direction of the handle and latch bolt accordingly to the opening direction when installing the door.

##### Change lock body direction

When installing the lock body, the latch bolt is on the upper side, the dead bolt under the latch bolt, and the inclined surface of the latch bolt is facing the opening direction.


- Reserve the lock body and latch bolt is down (refer to picture 2)
- Push the latch bolt lower than front plate, stoplock is down and rotate 180 degrees (refer to picture 2)
- Push the latch bolt into hole (refer to picture 3)

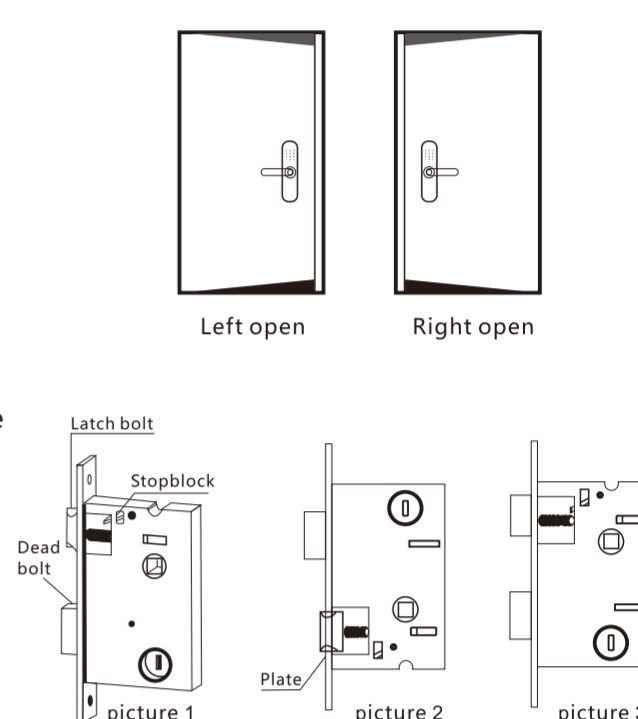

03


04

### Appearance & Dimensions

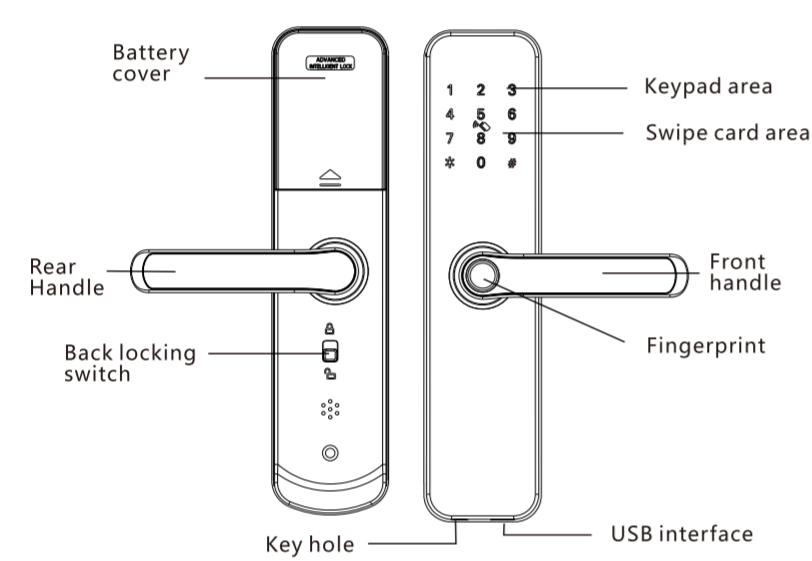

Item No.	Picture	Accessories	Quantity	Remark
1		Mortise	1pc	SD-50MM (22*160MM)
2		Door buckle plate	1pc	
3		IC card	2pc	If lock, please remove from the smart lock. Please refer to the manual for details.
4		Key	2pc	
5		Square rod	1pc	8*8*80MM
6		Cross round-head screw	4pc	4*20MM
7		Cross round-head screw	2pc	4*32MM
8		Installation stud	2pc	4*5*35MM

### Appearance & Dimensions

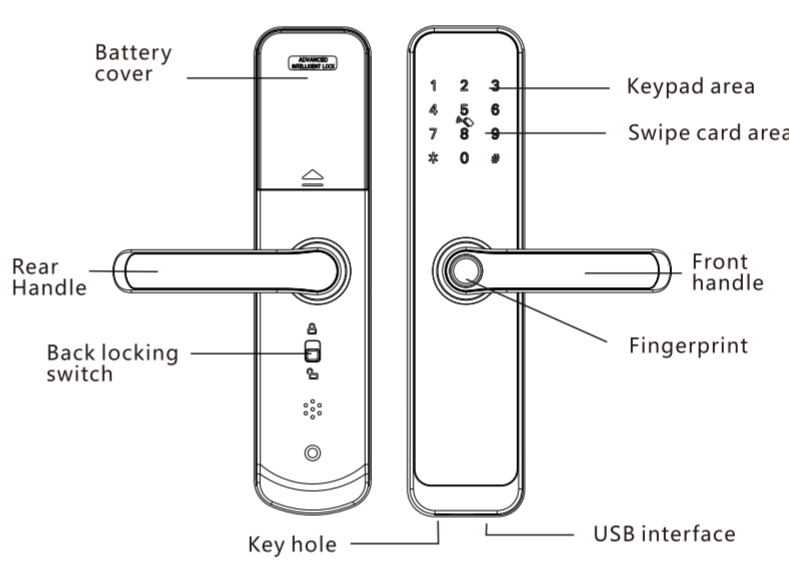


Item No.	Picture	Accessories	Quantity	Remark
1		Mortise	1pc	SD-50MM (22*160MM)
2		Door buckle plate	1pc	
3		IC card	2pc	If lock, please remove from the smart lock. Please refer to the manual for details.
4		Key	2pc	
5		Square rod	1pc	8*8*80MM
6		Cross round-head screw	4pc	4*20MM
7		Cross round-head screw	2pc	4*32MM
8		Installation stud	2pc	4*5*35MM

06


### Cutting template

- Please refer template carefully to drill hole
- If there is a deviation in the hole, the lock body and panel assembly are put into the door and the hole is corrected until appropriate.

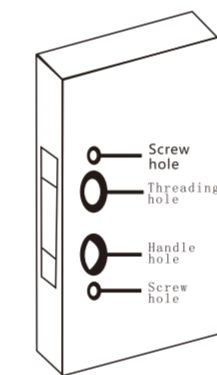


### Handle Reversing Method


- Remove the cross screw as the drawing and turn the handle up 180 degrees in the direction of the arrow
- After adjusting the direction of the handle, then install the cross screw to the original position and tighten it to complete the reversing.

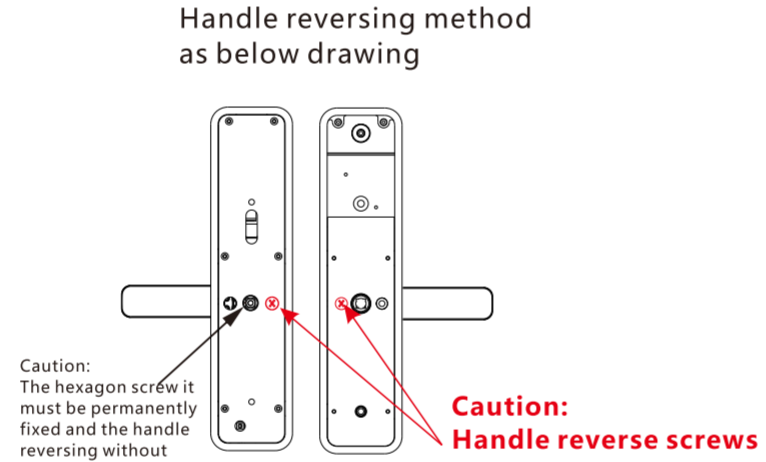

### Install lock body & Strike Box

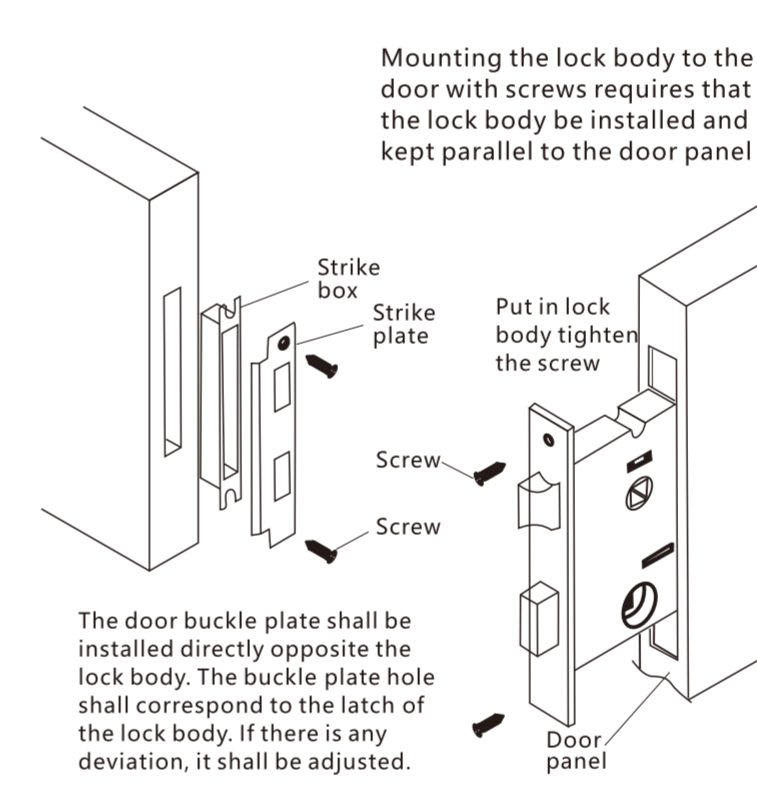


### Install lock

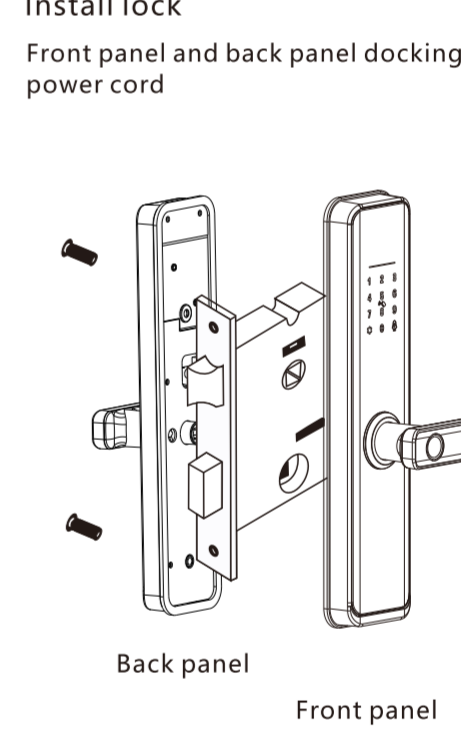


07

08

### Door direction: Right open

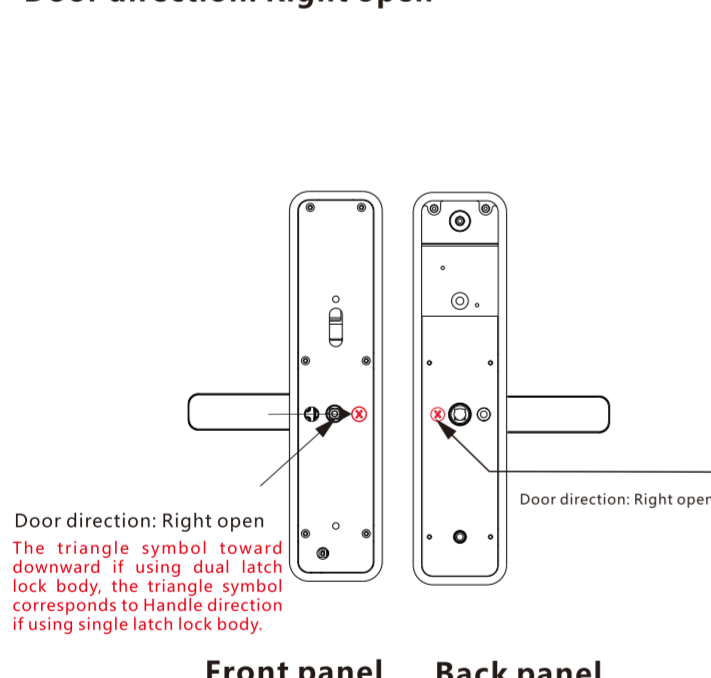

### Door direction: Left open

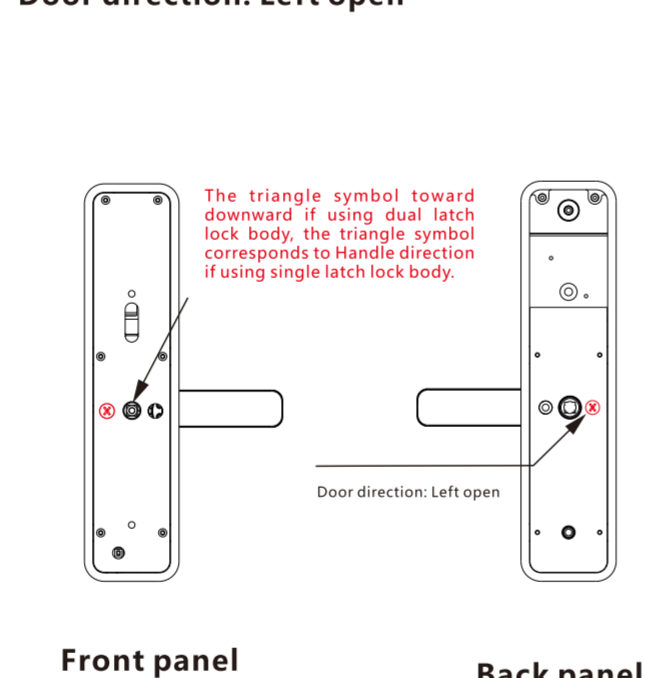

### 1. Function and Operation

- Unlock information: refers to the input fingerprint, password or IC card information (including administrators and ordinary users).
- Key "\*" : Clear key/back key.
- Key "#" : Confirmation key or menu function key.

### 2. Original state


1)The factory administrator initial password is "123456", under the initial state any fingerprint, IC card or password can open the lock.

### 2.Access door lock function management

**Initialization state**  
press "\*" then press "#"  
Voice broadcast: please enter administrator information (enter 123456#)  
After operation successfully, voice broadcast: press 1 for administrator settings, press 2 for user settings, press 3 for system settings, press 4 for restore settings.

#### 1.Admin setting

- Add administrator press "1"  
As (Picture 1), use hand covering face module, touch & activate keypad, press "\*" # and input 123456# enter into system  
Add administrator press "1", input admin information, enter fingerprint or password (Finger enter 4 times, password enter 6-8 digits twice, add admin press "1", IC card enter only 1 time).
- Delete admin information press "2"  
Input code number, and press # for confirmation(002#) (Cannot delete all, the 1" admin will keep)

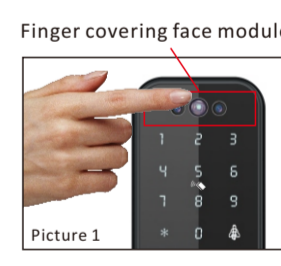

10


### 2.Add face

Press "\*" # input admin(finger- password- card) enter into setting page, press 1 enter into admin setting, add face press 2, front view the camera, per the voice tips complete the process, as picture 2.



### 3.Add a network

Hotspot connection press "1"  
Intelligent connection press "2" (TUYA)

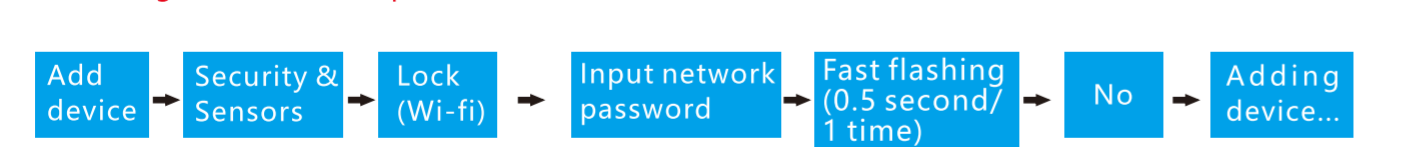

Remote unlocking: wake up the screen and press "9" + "#". There will be a voice prompt: requesting remote unlocking.

### Hotspot connection mode;

### Intelligent connection mode;

When the network is successfully added, the ""5""1""2"lights on the keyboard in order, and voice prompt "successful"

1) When the network add failure, the ""5""1""2"none lighting, voice prompt "Failure"

### User setting

### Add user

Press "1" voice prompt: please input user information, input fingerprint or password (fingerprint input 4 times, password input 6-8 bit digital twice), IC card input one time. It can input another user information after it successfully.

### 2) Press "2" for delete user

Press "2" voice prompt: press "1" input number delete, press "2" delete all, press "1" input number(010#) delete success.

### 3.System setting

- Press "3" voice prompt: press "1" for voice setting; press "2" for unlock mode setting; press "3" language setting, press "4" time setting, press "5" for modify room number.
- Unlock mode setting  
Press "2" voice prompt: press "1" for single unlock, press "2" for combine unlock. Press "1" voice prompt: operate success.
- Language setting  
Press "3" voice prompt: Press "1" for Chinese, press "2" for English.
- Time setting  
Press "4" voice prompt: present-time is 1903041153, please modify. Please modify based on the format (year-month-day, for example: 1903041153), and then press # to confirmed, it would tell you "Successful"
- Room number modify  
Press "5" voice prompt: room number 8888, please modify. You can input 4 numbers and press # to confirm. It would tell you "Successful"

### 4. Restore factory setting (Press the restore key under the battery cover on the rear panel of the lock around 6-8 seconds and hear a "Di" beep tone, restore successfully)

12

### Other notes

- The system will automatically enter the invalid input state if the unauthorized unlocking information is continuously incorrectly input for more than 5 times within 5 minutes, and the invalid input state will last for 90 seconds.
- After the voltage is lower than 4.5v, the lock will automatically alarm every time when it is opened. After the alarm, the lock can be opened for 200 times. After the number of times exceeds, each unlock delay is 5 seconds, new batteries must be replaced before the number of times available.
- Password peeping prevention function: Input password as follows when opening the door with password: XXX password XXX; you can add some extraneous codes before and after the password, and then press # to confirm. The password must be included in the input contents.
- If there is no operation more than 10 seconds, system will automatically exit.
- Initialization setting: Press the restore key under the battery cover on the rear panel of the lock around 6-8 seconds, all the lock information and records will clear after initialization (Please carefully operation)
- Normal open mode under close status, press 5 #, voice prompt "please input unlock information", input unlock information, voice prompt "Normal open mode, please attention to lock".
- Normal open mode under open status, press "5#", voice prompt "Normal is open closed".
- Anti-lock function: After pressing back locking key, the voice says "the door is locked". Now ordinary users cannot open it, and only administrators can unlock.
- Under initialization status, input "555666888", support switch language of "English and Chinese".

13

### Warranty Card

The Company provide life-long maintenance for the sale of products, from the date of purchase within one year, the company provides free warranty service!The following cases are not held for free warranty services:  
(1) If there is no product warranty card or valid purchase voucher, the warranty card and purchase certificate do not match the product;  
(2) Damage caused by human factors, including use in an abnormal working environment, damage caused by the use of a non-stated manual, etc.;  
(3) The user's private dismantling, self-repair, modification or maintenance by a non-authorized unit of the Company or other irresistible factors damaged

User name	Contact tel
Address	Lock cylinder No
Model No	Serial No
Serial No	Purchase date
Purchase date	Install date
Supplier	
Contact address	Contact tel
Contact tel	

Note to users:  
In order to protect your Legal rights, please keep the service card and the relevant purchase voucher, to protect your Legal rights in warranty services, warranty card once modified will be invalid

### Technical Parameters

- Power supply: normal version 6V  
3D cat eye version 7.8V(Optional)
- Quiescent current: <50-65uA
- Administrators number: 9
- Unlock methods: Fingerprint, IC card, Password, Key, WeChat Mini program, Tuya smart(Optional)
- Working current: > 250uA
- Face capacity: <= 100
- Fingerprint: <= 50
- Card: <= 100
- Password: <= 100
- Password length: 6-8 bit
- Phantom password: 16 bit
- Lower voltage alarm: 4.5±0.2V
- Working temperature: -10°C~60°C
- Working relative humidity: 20% ~ 93%